



Pomoli centrali con rosette/bocchette 51 "BASSE": *fissaggio con tiranti*


Central door knobs with "LOW" 51 rosettes/escutcheons: *with fixing bolts*

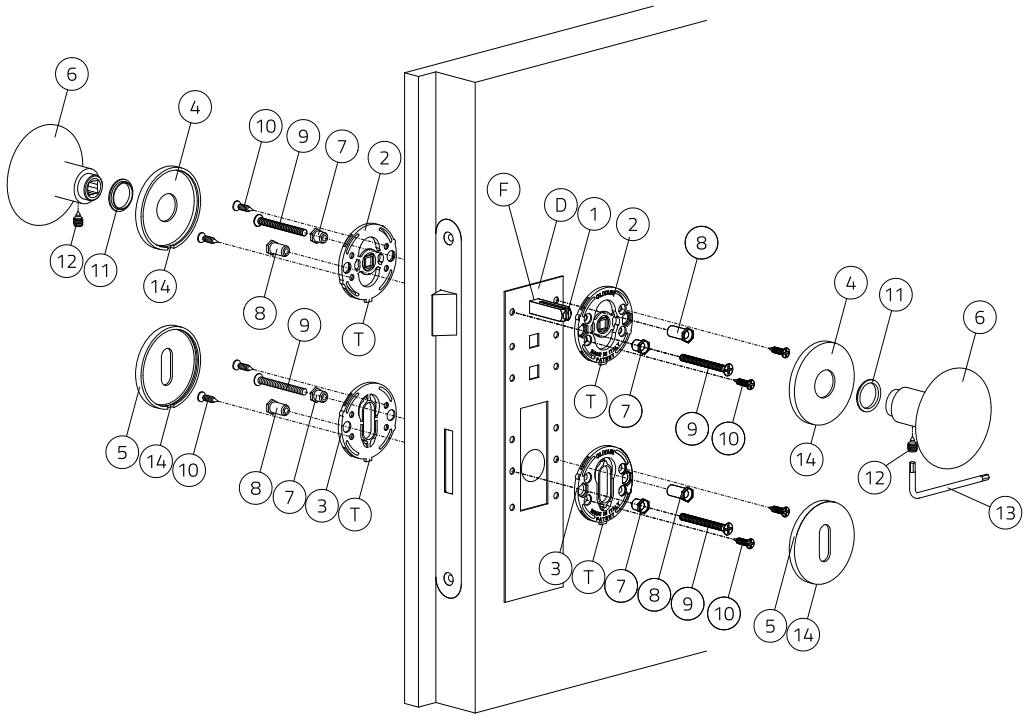


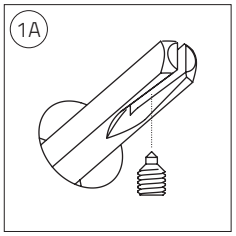

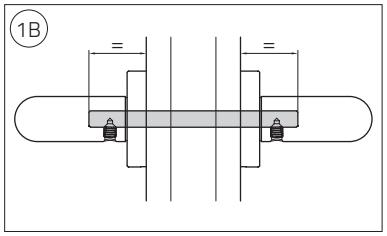

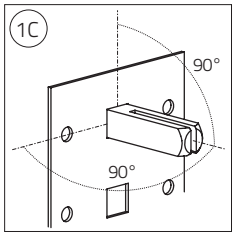

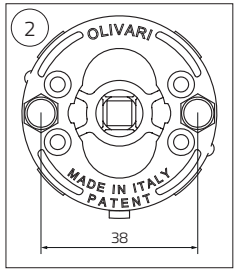

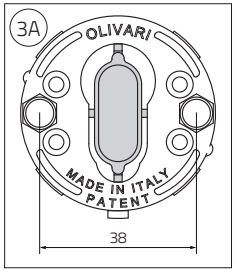

IT

- Inserire nella serratura il ferro quadro (**1**) con la svasatura rivolta verso il basso (**1A**), centrandolo rispetto allo spessore porta (**1B**).
- Su entrambe i lati: inserire la DIMA (**D**) sul ferro quadro (**1**) attraverso il foro (**F**) e allinearla verticalmente alla porta.
  - Verificare attentamente che il quadro (**1**) sia posizionato perpendicolarmente rispetto al piano della porta (**1C**).
  - Segnare i 2 fori per la sottorosetta senza molla (**2**).
  - Con bocchetta patent segnare i 2 fori BB72 per la sottobocchetta (**3**).
    Nel caso di bocchetta yale rimuovere dalla sottobocchetta (**3**) la parte di guida centrale (**3A**) quindi togliere la DIMA (**D**) e presentare direttamente la sottobocchetta (**3**) sul cilindro e segnare i 2 fori.
  - Togliere la DIMA (**D**).
  - Togliere la serratura quindi forare con una punta Ø7mm su entrambe i lati fino al vano serratura.
  - Rimettere la serratura.
- Su entrambe i lati: inserire una bussola (**7**) e un controtirante (**8**) nelle rispettive sedi sulla sottorosetta senza molla (**2**).
  - Inserire la sottorosetta senza molla (**2**) sul ferro quadro (**1**) con la tacca (**T**) rivolta verso il basso.
- Su entrambi i lati: inserire un tirante (**9**) attraverso la bussola (**7**) ed avvitare senza deformare la porta.
  - Avvitare le due viti (**10**) nelle rispettive sedi.
  - Applicare a pressione le rosette (**4**) con il taglio (**14**) rivolto verso il basso quindi applicare la bussola in nylon (**11**).
- Su entrambi i lati: inserire il pomolo (**6**) sul ferro quadro (**1**), mantenendolo centrato rispetto allo spessore porta (**1B**) e avvitare a fondo il grano (**12**) con la chiave (**13**).
- Su entrambe i lati: inserire sulla sottobocchetta (**3**) una bussola (**7**) e un controtirante (**8**) nelle rispettive sedi.
  - Fissare la sottobocchetta (**3**) con la tacca (**T**) rivolta verso il basso inserendo un tirante (**9**) attraverso la bussola (**7**) e avvitare senza deformare la porta.
  - Avvitare le due viti (**10**) nelle rispettive sedi.
  - Applicare a pressione la bocchetta (**5**) con il taglio (**14**) rivolto verso il basso.

GB

- Place the spindle (**1**) in the lock with the flared routed side downwards (**1A**) and centered within the door thickness (**1B**).
- On both sides: slide the template (**D**) on the spindle (**1**) through the hole (**F**) and align vertically with the door.
  - Check carefully that the spindle (**1**) is positioned perpendicular to the door (**1C**).
  - Mark the 2 holes for the rspringless undercostruction (**2**).
  - With the keyhole escutcheons mark the 2 holes BB72 for the inner baseplates (**3**).
    If using euro cylinder escutcheons remove the central oval section (**3A**) from the inner baseplate (**3**) then remove the template (**D**) and slide the inner baseplate (**3**) directly on the cylinder and mark the 2 holes.
  - Remove the template (**D**).
  - Remove the lock then drill with a Ø7mm drill bit through on both sides up to the lock aperture.
  - Replace the lock.
- On both sides: insert a sleeve (**7**) and a threaded sleeve nut (**8**) in their holes in the springless undercostruction (**2**).
  - Place the rrspringless undercostruction (**2**) on the spindle (**1**) with the tag (**T**) facing down.
- On both sides: insert a machine screw (**9**) through the sleeve (**7**) and screw in without damaging the door.
  - Tighten the two screws (**10**) in their holes.
  - Apply pressure to the rose covers (**4**) with the notch (**14**) facing down then fix the nylon bushes (**11**).
- On both sides: slide the door knob (**7**) on the spindle (**1**) keeping it centered with the door thickness (**1B**) and tighten the grub screw (**12**) with the allen key (**13**).
- On both sides: insert the sleeve (**7**) and a threaded sleeve nut (**8**) in their holes in the escutcheon inner baseplate (**3**)
  - Fix the inner baseplate (**3**) with the tag (**T**) facing down by inserting the machine screw (**9**) through the sleeve (**7**) and then screw in without damaging the door.
  - Tighten the two screws (**10**) in their holes.
  - Apply pressure to the escutcheon covers (**5**) with the notch (**14**) facing down.

Contatti/Contacts

Olivari B. spa
e. info@olivari.it
t. +39 0322 835080

OLIVARI